
Inflation adaptor

1. Use the inflation adaptor as screwdriver to remove the white valve plug.
2. Screw in the adaptor until it tightens.
3. Various models of inflation nozzles and pumps can be used for inflation.
4. DO NOT over-inflate the fender/buoy.
5. After inflation screw back in the valve plug.

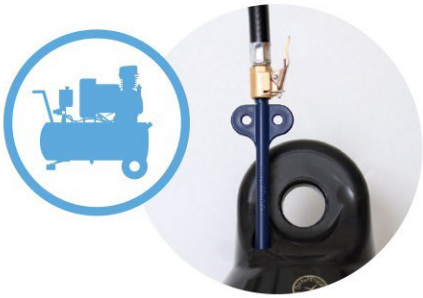







www.danfender.com

The **Quality** that **makes** a **difference**